




**WIRING DIAGRAM**

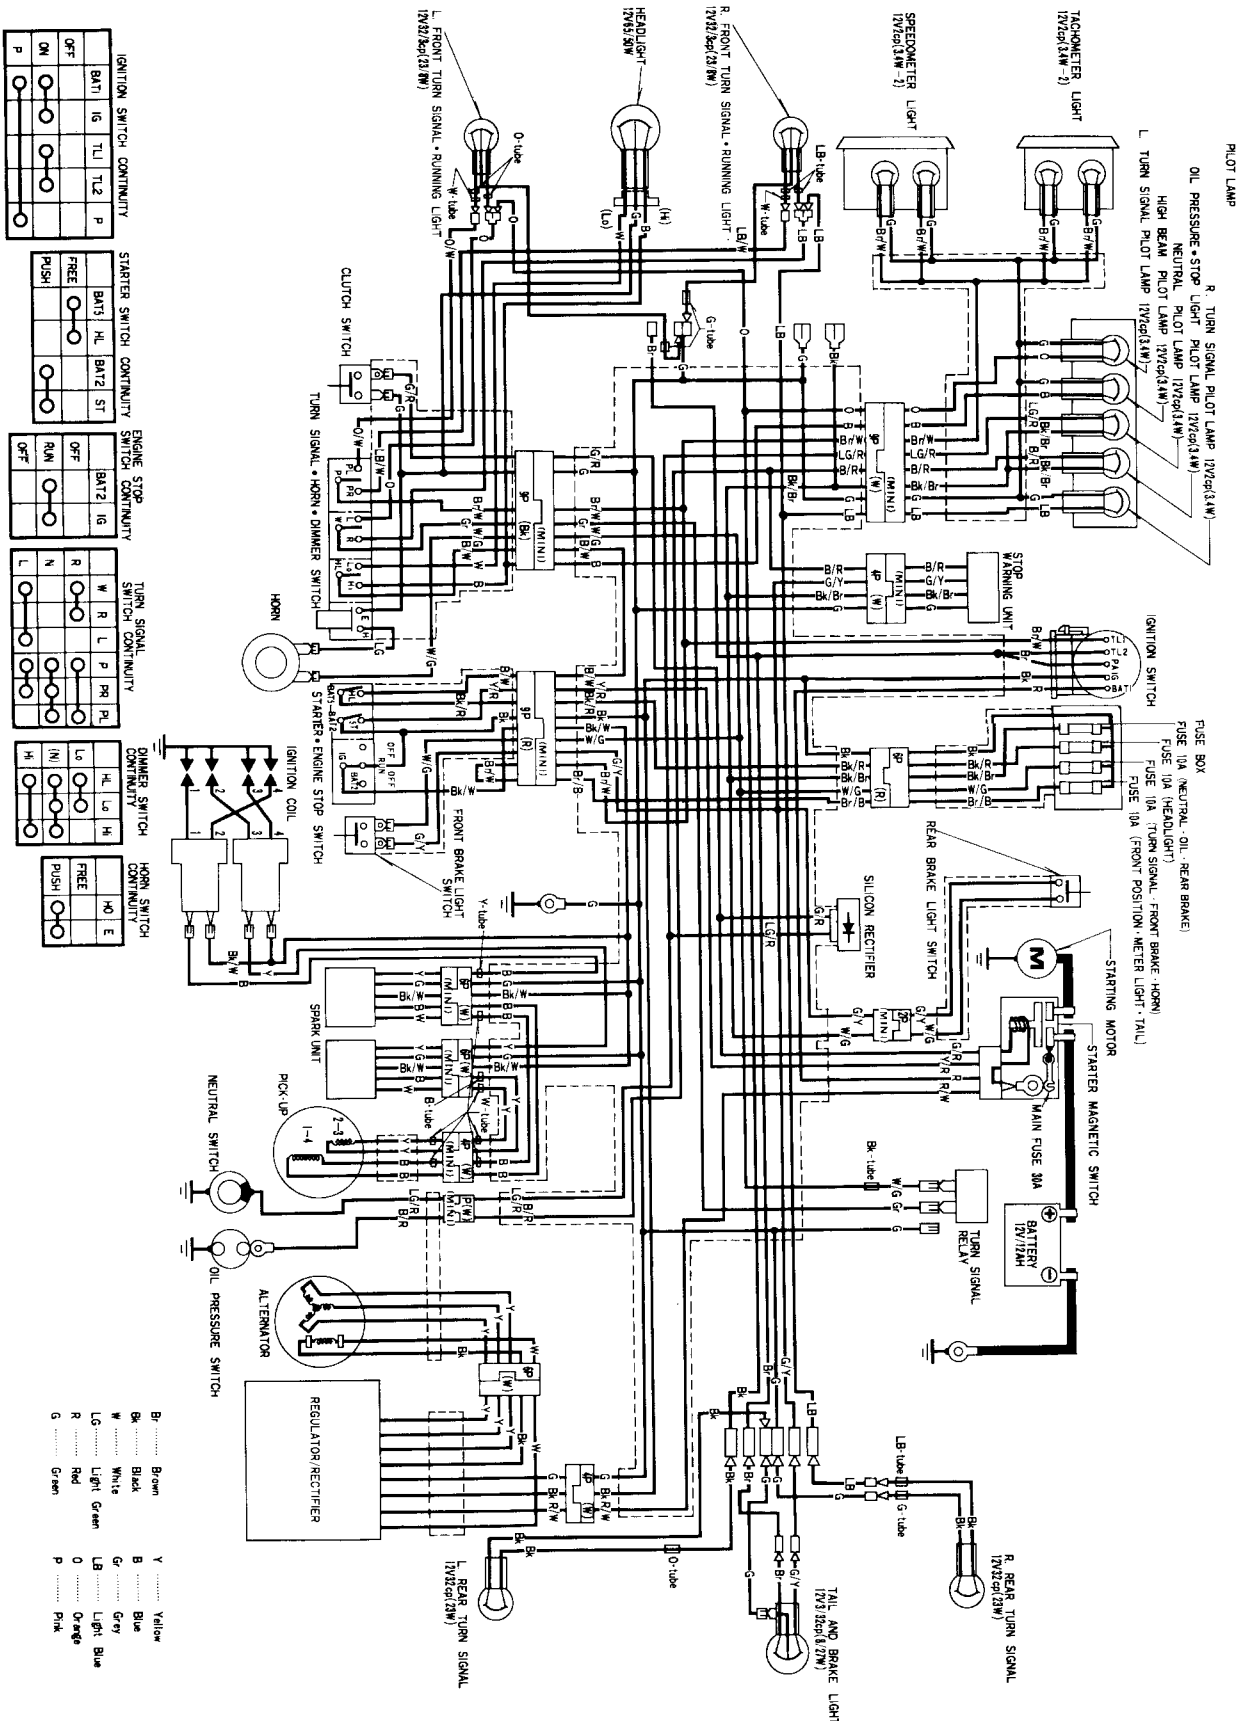

IGNITION SWITCH CONTINUITY

OFF	BAT1	IG	TU1	TU2	P
ON	○	○	○	○	○
P	○	○	○	○	○

STARTER SWITCH CONTINUITY

BAT1	HL	BAT2	ST
FREE	○	○	○
PUSH	○	○	○

ENGINE STOP SWITCH CONTINUITY

OFF	BAT2	IG
OFF	○	○
OFF	○	○

TURN SIGNAL SWITCH CONTINUITY

W	R	L	P	RI	PL
○	○	○	○	○	○
○	○	○	○	○	○

DIMMER SWITCH CONTINUITY

HL	Ld	H
○	○	○
○	○	○

HORN SWITCH CONTINUITY

HL	E
FREE	○
PUSH	○

- Bk ..... Black
- W ..... White
- LG ..... Light Green
- R ..... Red
- G ..... Green
- Y ..... Yellow
- B ..... Blue
- Gr ..... Gray
- LB ..... Light Blue
- O ..... Orange
- P ..... Pink

0030Z-426-7700